

HOMEPLACE


by Capital Lighting Fixture Co.

LIGHTING

ASSEMBLY AND INSTALLATION INSTRUCTIONS for the 250511-LD LED Fixture

Important Safety information (Please read before proceeding)

1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. **Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.**
2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. **NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.**
3. **Never use light bulbs with wattage ratings that exceed the fixtures maximum rating.** Always make sure the electric current is turned off before changing the bulbs.
4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

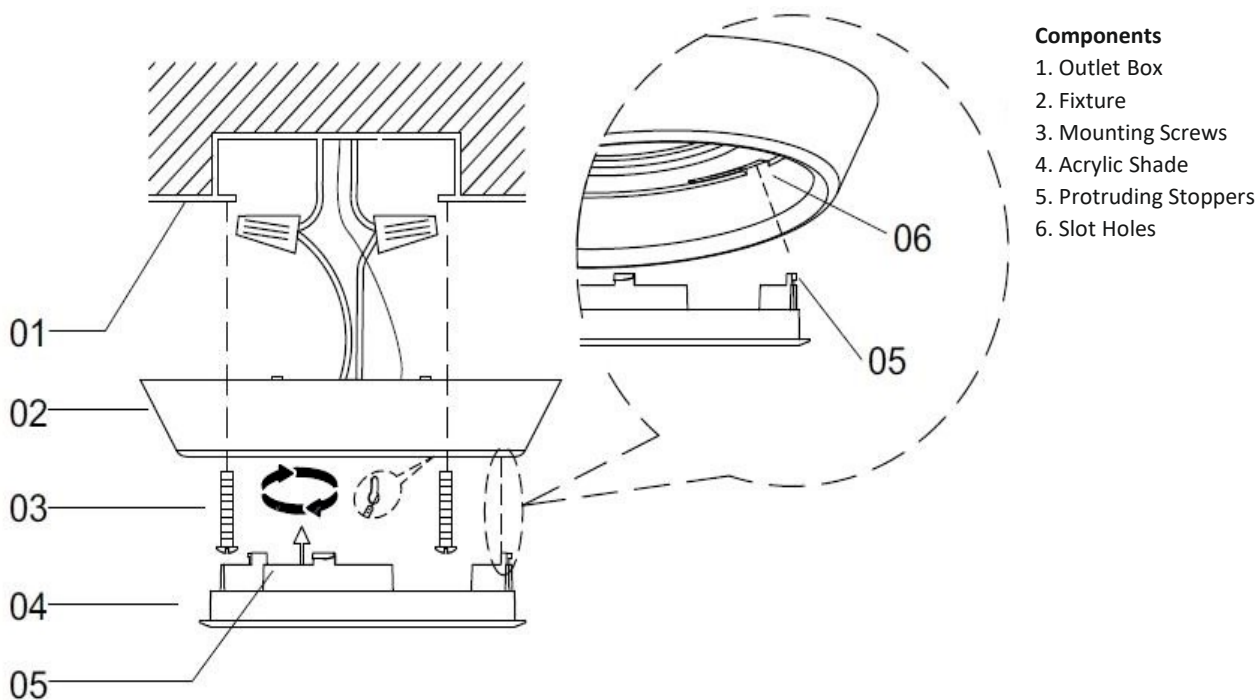

Components

1. Outlet Box
2. Fixture
3. Mounting Screws
4. Acrylic Shade
5. Protruding Stoppers
6. Slot Holes

Assembly Instructions for the 250511-LD LED fixture

1. Assemble Mounting Screws (3) into threaded holes of Outlet Box (1) per illustration shown.
2. Raise Fixture (2) toward outlet box, then connect fixture ground wire to outlet box ground wire with wire connector supplied; connect white fixture wire to the white power supply wire with wire connector supplied; connect black fixture wire to the black power supply wire with wire connector supplied.
3. Push Fixture (2) to ceiling, carefully passing Mounting Screws (3) through slot holes, hold and secure fixture to ceiling by tightening Mounting Screws (3).
4. Raise Acrylic Shade (4) up to Fixture (2), then twist Acrylic Shade (4) per illustration shown, make sure Protruding Stoppers (5) of acrylic shade edge setting into Slot Holes (6) of fixture pan securely per illustration shown (DO NOT over tighten.)

HOMEPLACE


by Capital Lighting Fixture Co.

LIGHTING

INSTRUCTIONS D'ASSEMBLAGE ET D'INSTALLATION pour le luminaire à DEL 250511-LD

Informations importantes sur la sécurité (à lire avant de continuer)

1. Retirez le luminaire, les pièces et tous les sacs de matériel de montage (orange) du carton et vérifiez que toutes les pièces sont présentes conformément à la feuille d'illustration. Toutes les pièces doivent être utilisées comme indiqué. Ne remplacez aucune pièce, ne laissez aucune pièce de côté et n'utilisez aucune pièce usée ou cassée. Le non-respect des instructions peut entraîner une situation dangereuse, annuler la garantie et enfreindre les normes U.L. liste de l'installation.
2. Pour éviter tout choc électrique, coupez l'alimentation principale au disjoncteur avant d'installer le luminaire. N'essayez JAMAIS d'installer, de nettoyer ou de remplacer des ampoules sans couper l'électricité du luminaire.
3. N'utilisez jamais d'ampoules dont la puissance nominale dépasse la valeur nominale maximale de l'appareil. Assurez-vous toujours que le courant électrique est coupé avant de changer les ampoules.
4. Si vous rencontrez des difficultés lors de l'installation de l'appareil d'éclairage ou s'il ne fonctionne pas comme prévu, veuillez contacter un entrepreneur en électricité qualifié local.
5. Veuillez contacter votre revendeur local Capital Lighting Fixture pour toute question d'assemblage ou d'installation. Votre revendeur local peut

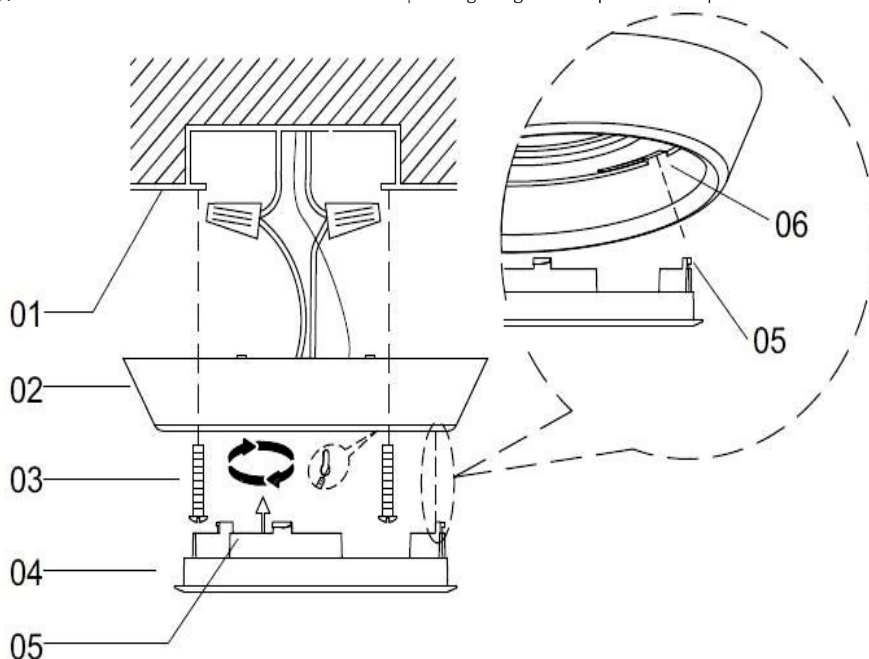

Composantes

1. Boîte de sortie
2. Fixation
3. Vis de montage
4. Abat-jour en acrylique
5. Bouchons saillants
6. Trous de fente

Instructions de montage pour le luminaire LED 250511-LD

1. Assemblez les vis de montage (3) dans les trous filetés de la boîte de sortie (1) conformément à l'illustration.
2. Soulevez le luminaire (2) vers la boîte de sortie, puis connectez le fil de terre du luminaire au fil de terre de la boîte de sortie avec le connecteur de fil fourni ; connectez le fil blanc du luminaire au fil blanc d'alimentation électrique avec le connecteur de fil fourni ; connectez le fil noir du luminaire au fil noir d'alimentation avec le connecteur de fil fourni.
3. Poussez le luminaire (2) vers le plafond, en faisant passer avec précaution les vis de montage (3) dans les trous oblongs, maintenez et fixez le luminaire au plafond en serrant les vis de montage (3).
4. Soulevez l'abat-jour en acrylique (4) jusqu'au luminaire (2), puis tournez l'abat-jour en acrylique (4) selon l'illustration, assurez-vous que les butées saillantes (5) du bord de l'abat-jour en acrylique se placent dans les trous de fente (6) du plateau du luminaire en toute sécurité selon l'illustration illustré (NE PAS trop serrer.)

HOMEPLACE

by Capital Lighting Fixture Co.

LIGHTING



Energy Star Product Warranty

CAPITAL LIGHTING FIXTURE COMPANY warrants its lamps and fixtures against defects in material and workmanship.

Without charge, CAPITAL LIGHTING FIXTURE COMPANY will replace any properly installed ENERGY STAR lamp or fixture which fails under normal operating conditions and has not undergone abuse beyond normal wear-and-tear within the specified warranty period. Lamps or fixtures that show signs of physical abuse, tampering or moisture damage will not be covered under warranty.

All lamps and fixtures are covered during the warranty period of 5 years from the original date of purchase if returned to the factory, transportation prepaid, and our warranty inspection determines the product to be defective under the terms of the warranty. A Return Merchandise Authorization (RMA) must be issued by CAPITAL LIGHTING FIXTURE COMPANY prior to the return of any product.

This warranty does not cover damage due to acts of nature such as lightning strikes, hurricanes, tornados, earthquakes and floods. It covers only equipment manufactured or sold by CAPITAL LIGHTING FIXTURE COMPANY.

CAPITAL LIGHTING FIXTURE COMPANY is not liable for indirect, incidental, or consequential damages in the connection with use of equipment, including but not limited to damage or injury to vegetation, property or persons resulting from installers' actions whether negligent or otherwise.



HOMEPLACE

by Capital Lighting Fixture Co.

LIGHTING

Reverse Side of Warranty card below



TO INITIATE A WARRANTY CLAIM

Should a malfunction occur, first check to see that some simple, obvious, or routine step in the normal operating procedure has not been overlooked – a blown fuse, tripped breaker, etc.

Should a malfunction be present, call CAPITAL LIGHTING FIXTURE COMPANY to request authorization for a return or replacement. We will need the following information to process your claim:

- Model Number or Name of fixture**
- Original Purchase date**
- Distributor / Showroom where the unit was purchased**
- Date of Installation**
- Symptoms of malfunction**

CAPITAL LIGHTING FIXTURE COMPANY may issue a RMA number and require the product to be returned for inspection prior to a replacement being shipped.

For warranty claims call:
CAPITAL LIGHTING FIXTURE COMPANY
Customer Service Department
(800) 323-3257

