




## ASSEMBLY AND INSTALLATION INSTRUCTIONS for the **860751** Fixture

### Important Safety information (Please read before proceeding)

1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. **Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.**
2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. **NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.**
3. **Never use light bulbs with wattage ratings that exceed the fixtures maximum rating.** Always make sure the electric current is turned off before changing the bulbs.
4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

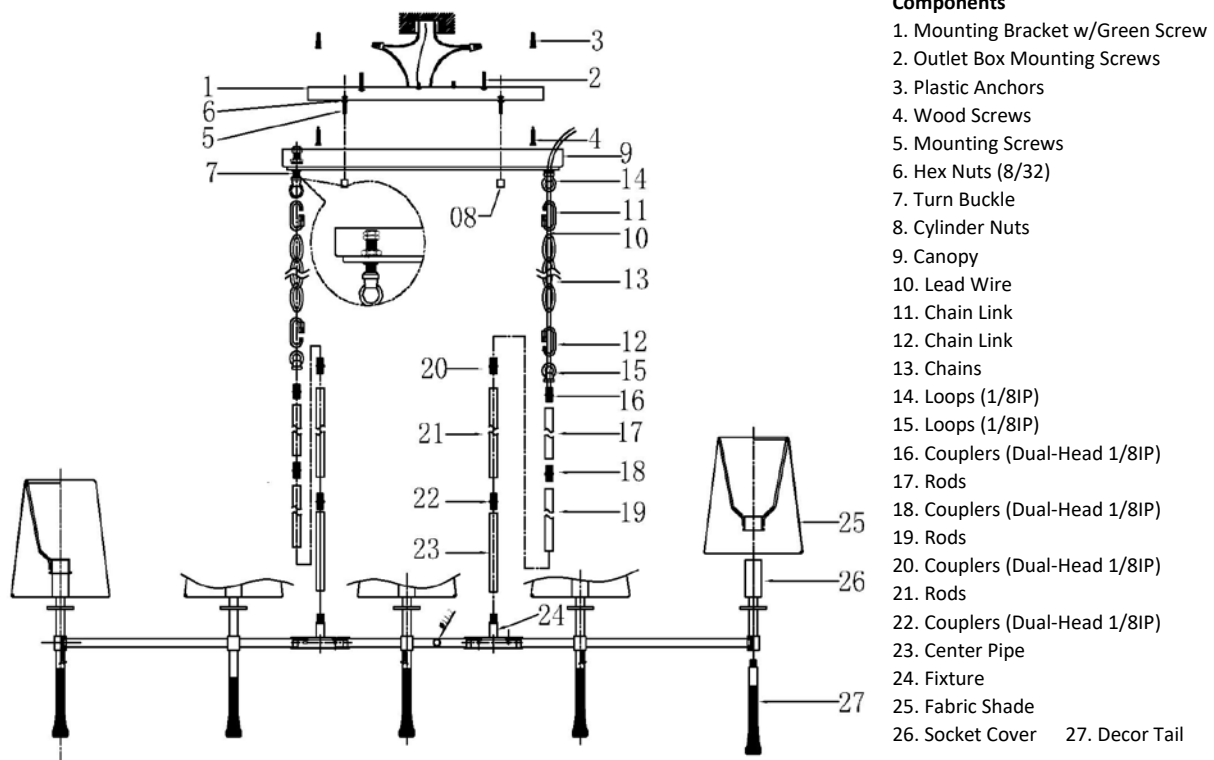

### Components

1. Mounting Bracket w/Green Screw
2. Outlet Box Mounting Screws
3. Plastic Anchors
4. Wood Screws
5. Mounting Screws
6. Hex Nuts (8/32)
7. Turn Buckle
8. Cylinder Nuts
9. Canopy
10. Lead Wire
11. Chain Link
12. Chain Link
13. Chains
14. Loops (1/8IP)
15. Loops (1/8IP)
16. Couplers (Dual-Head 1/8IP)
17. Rods
18. Couplers (Dual-Head 1/8IP)
19. Rods
20. Couplers (Dual-Head 1/8IP)
21. Rods
22. Couplers (Dual-Head 1/8IP)
23. Center Pipe
24. Fixture
25. Fabric Shade
26. Socket Cover
27. Decor Tail

### Assembly Instructions for the 860751 Fixture

1. Pass Lead Wire (10) from top of Fixture (24) through Center Pipe (23), Coupler (22), Rod (21), Coupler (20), Rod (19), Coupler (18), Rod (17), Coupler (16) and Loop (15), then screw all of them together. After that, repeat the same assembling steps for another side without wiring.
- Note: The Fixture Height can be adjusted by varying the number of rods or chain used in the assembly.*
2. Pass Lead Wire (10) thru one Chain Link (12), Chain (13), another Chain Link (11), Small Loop (14) from Canopy (9). Finally, connect all of them together. After that, repeat the same assembling steps for another side without wiring.
3. Find appropriate threaded holes on Mounting Bracket (1), then assemble Mounting Bracket (1) to mounting surface using hardware suitable for material of mounting surface. Mark position of holes on mounting surface before using provided Plastic Anchors (3), drill appropriate holes and assemble as illustrated.
4. Find appropriate threaded holes on Mounting Bracket (1), and assemble Mounting Screws (5) into threaded holes with Hex Nuts (6).
5. Attach Mounting Bracket (1) to Outlet Box with Outlet Box Mounting Screws (2), and to mounting surface with Wood Screws (4) tightly.
6. Raise whole Fixture (24) toward outlet box, wrap fixture grounding wire around Green Screw on Mounting Bracket (1), then connect it to outlet box grounding wire with wire connector supplied; connect the common wire of the lamp cord to the power supply white wire with wire connector supplied; connect supply wire of the lamp cord to the power supply black wire with wire connector supplied. *Note: This fixture is wired using 2 conductor Lamp cord. The insulation between the two conductors on the lamp cord can be split down the center for better access to the two conductors. The common wire on the lamp cord is identified as the conductor with ribs embossed in the rubber wire insulation.*
7. Push Canopy (9) to ceiling, carefully passing Mounting Screws (5) through holes in Canopy (9), then verify all wires are securely inside Canopy (9). Finally, secure Canopy (9) to ceiling with Cylinder Nuts (8).
8. Screw Decor Tail (27) onto Fixture (24).
9. Set Fabric Shade (25) onto Socket Cover (26).

**Note: If the fixture is not leveled after hung, please adjust (screw) the Turn Buckle (7) up or down to help it.**