




LIGHTING FIXTURE COMPANY

ASSEMBLY AND INSTALLATION INSTRUCTIONS for the 936821 Outdoor Fixture

**Important Safety information (Please read before proceeding)**

1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. **Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.**
2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. **NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.**
3. **Never use light bulbs with wattage ratings that exceed the fixtures maximum rating.** Always make sure the electric current is turned off before changing the bulbs.
4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

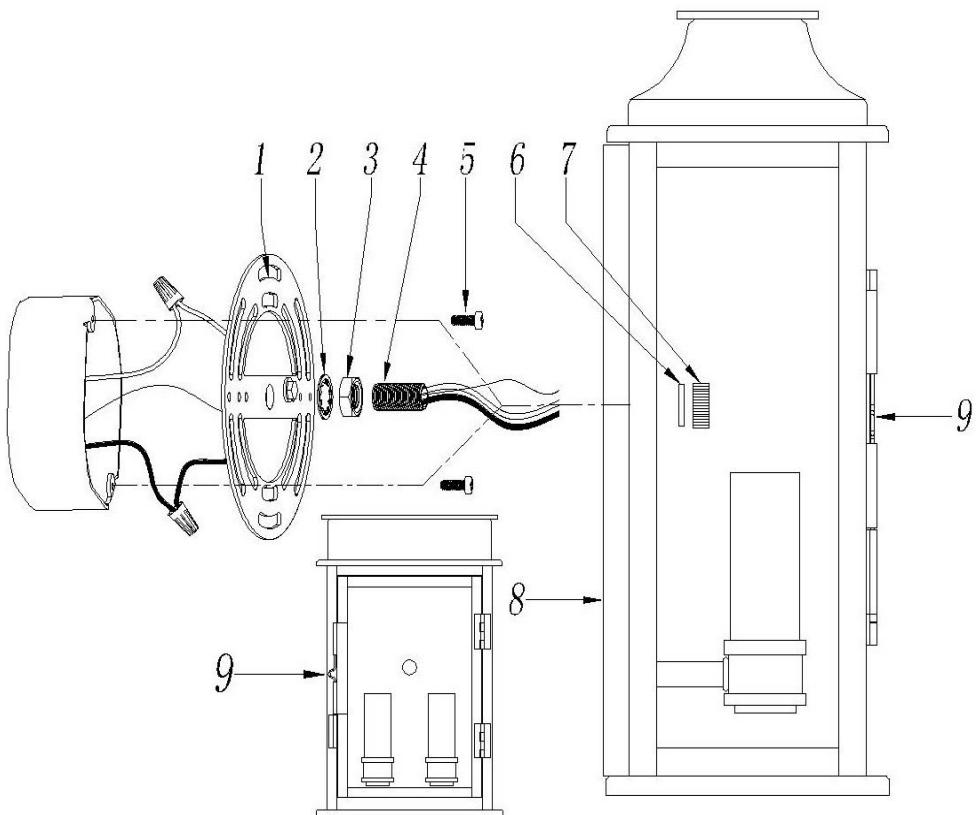

**Components**

1. Mounting Bar w/Green Screw
2. Washer
3. Hex Nut
4. Nipple
5. Outlet Box Mounting Screws
6. Rubber Washer
7. Knurled Knob
8. Fixture
9. Door

**Installation Instructions for the 936821 outdoor wall mount fixture**

1. Open Door (9) and take out the protecting crushing materials inside cage of Fixture (8).
2. Take Nipple (4) from parts bag and run Hex Nut (3) with Washer (2) down Nipple (4), then tighten Hex Nut (3) with Washer (2) against the Mounting Bar (1). Mounting Bar (1) must be positioned with extruded thread faced into Outlet Box. Nipple (4) must protrude out the back of Mounting Bar (1).
3. Attach Mounting Bar (1) to Outlet Box with Outlet Box Mounting Screws (5).
4. Raise Fixture (8) toward outlet box, then connect fixture ground wire to outlet box ground wire with wire connector supplied; connect white fixture wire to the white power supply wire with wire connector supplied; connect black fixture wire to the black power supply wire with wire connector supplied.
5. Push Fixture (8) to wall, make sure mounting holes in Fixture (8) canopy and Mounting Bar (1) are in line, verify all wires are securely inside fixture back plate, then Secure Canopy of Fixture (8) to wall with Rubber Washer (6) and Knurled Knob (7).
6. Insert recommended bulb per wattage label indicated onto Sockets, then close Door (9).

**Note: Guide for Outdoor Mounting Fixture and/or in Wet Locations:**

1. Mounting surface should be clean, dry, flat and 1/4" larger than the canopy on all sides. Any gaps between mounting surface and canopy exceeding 3/16" should be corrected as required.
2. Use silicone caulking compound (not provided), caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.