




LIGHTING FIXTURE COMPANY

ASSEMBLY AND INSTALLATION INSTRUCTIONS for the **939731** Outdoor Fixture

Important Safety information (Please read before proceeding)

1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. **Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.**
2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. **NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.**
3. **Never use light bulbs with wattage ratings that exceed the fixtures maximum rating.** Always make sure the electric current is turned off before changing the bulbs.
4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

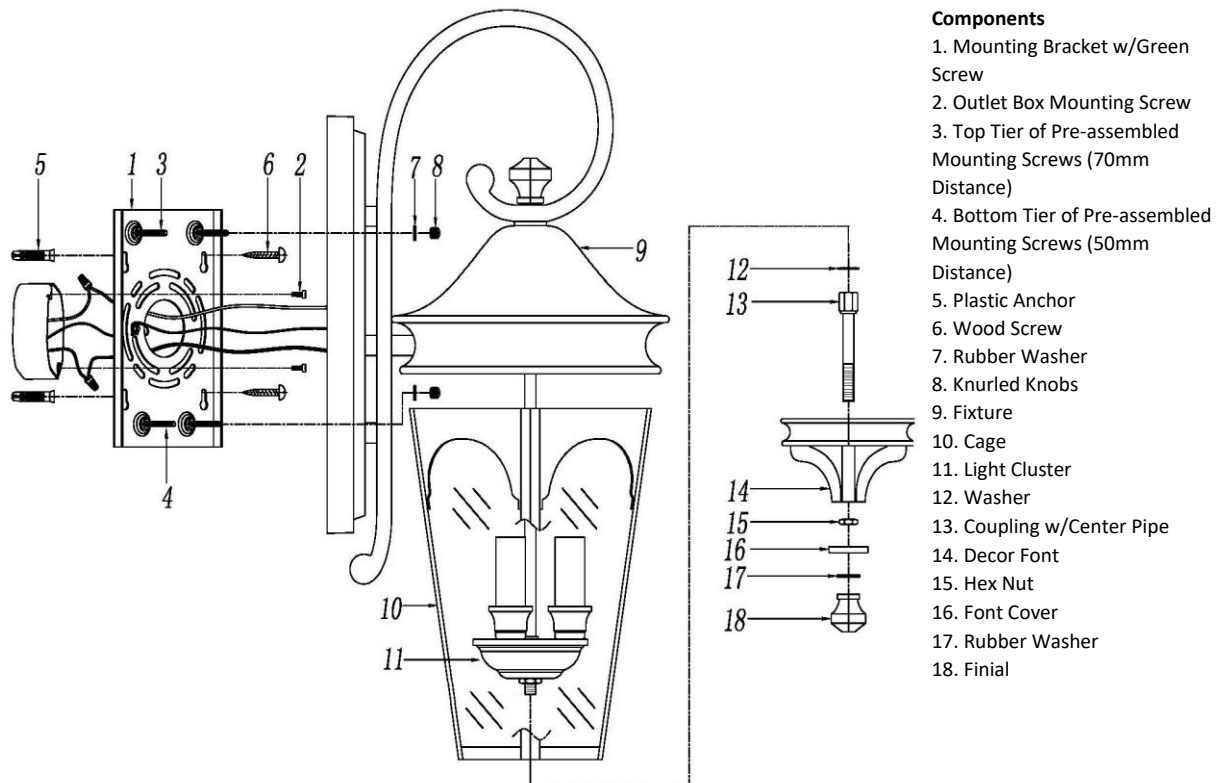

Components

1. Mounting Bracket w/Green Screw
2. Outlet Box Mounting Screw
3. Top Tier of Pre-assembled Mounting Screws (70mm Distance)
4. Bottom Tier of Pre-assembled Mounting Screws (50mm Distance)
5. Plastic Anchor
6. Wood Screw
7. Rubber Washer
8. Knurled Knobs
9. Fixture
10. Cage
11. Light Cluster
12. Washer
13. Coupling w/Center Pipe
14. Decor Font
15. Hex Nut
16. Font Cover
17. Rubber Washer
18. Finial

Installation Instructions for the 939731 outdoor wall mount fixture

1. Disassemble the pre-installed Cage (10) from Fixture (9), then take out the protecting crushing materials.
2. Find appropriate threaded holes on Mounting Bracket (1), then assemble Mounting Bracket (1) to mounting surface using hardware suitable for material of mounting surface. Mark position of holes on mounting surface before using provided Plastic Anchors (5), drill appropriate holes and assemble as illustrated.
3. Attach Mounting Bracket (1) to Outlet Box with Outlet Box Mounting Screws (2), and to mounting surface with Wood Screws (6) tightly.
4. Raise Fixture (9) toward outlet box, then connect fixture ground wire to outlet box ground wire with wire connector supplied; connect white fixture wire to the white power supply wire with wire connector supplied; connect black fixture wire to the black power supply wire with wire connector supplied.
5. Push Canopy of Fixture (9) to wall, carefully passing both top tier of Pre-assembled Mounting Screws (3) in distance of 70mm and bottom tier of Pre-assembled Mounting Screws (4) in distance of 50mm through holes, verify all wires are securely inside fixture back plate, then Secure Canopy of Fixture (9) to wall with Rubber Washers (7) and Knurled Knobs (8).
6. Insert recommended bulb per wattage label indicated onto Sockets.
7. Raise Cage (10) over Light Cluster (11) onto Fixture (9), secure them with Washer (12) and Coupling w/Center Pipe (13). After that, raise Decor Font (14) over end of Coupling w/Center Pipe (13) onto bottom of Cage (10) and secure it with Hex Nut (15). Finally, raise Font Cover (16) over end of Coupling w/Center Pipe (13) onto bottom of Decor Font (14) and secure them by Rubber Washer (17) and Finial (18) in place.

Note: Guide for Outdoor Mounting Fixture and/or in Wet Locations:

1. Mounting surface should be clean, dry, flat and 1/4" larger than the canopy on all sides. Any gaps between mounting surface and canopy exceeding 3/16" should be corrected as required.
2. Use silicone caulking compound (not provided), caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.