


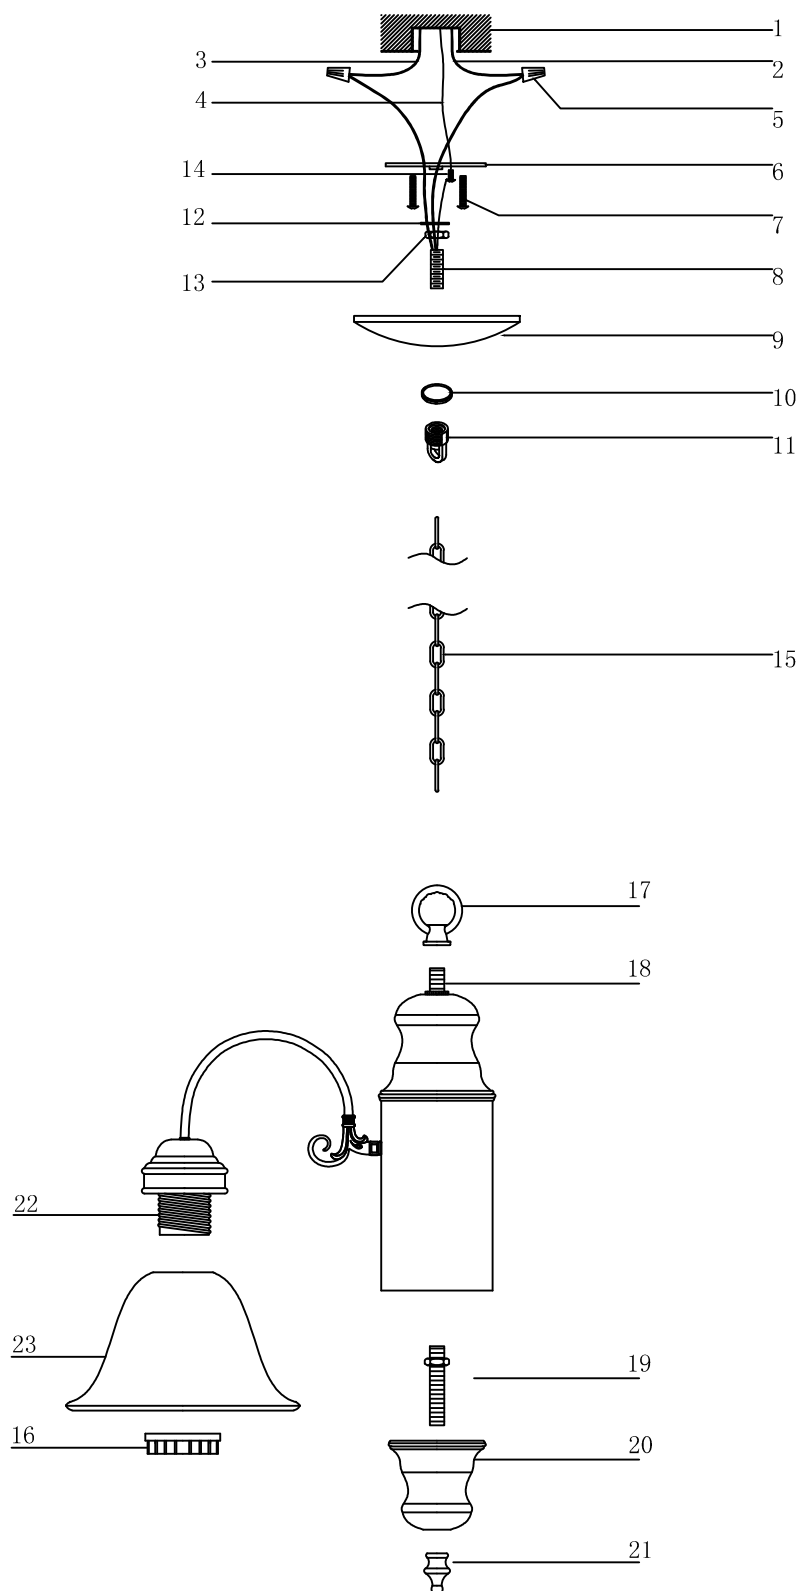

1. OUTLET BOX
2. WHITE WIRE
3. BLACK WIRE
4. GROUND WIRE
5. WIRE CONNECTOR
6. CROSS BAR
7. MOUNTING SCREW
8. NIPPLE-1
9. CANOPY
10. TOP NUT
11. CRYSTAL LOOP
12. KEY WASHER-1
13. HEX NUT-1
14. GREEN SCREW
15. CHAIN
16. NORDSPACER
17. TOP LOOP
18. NIPPLE-2
19. NIPPLE-3
20. COVER
21. FINIAL
22. SOCKET
23. GLASS

BULBS NOT INCLUDED

INSTALLATION AND SAFETY INSTRUCTIONS FOR HANGING FIXTURES

WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SET AT OFF.

GENERAL: You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system.

READ ALL INSTRUCTIONS: All wiring must meet national and local electrical codes. If you are unsure of the electrical codes or unclear about any steps, have a qualified electrician install this fixture.

INSTALLATION: FIGURE 1

IMPORTANT: DO NOT ATTACH FIXTURE DIRECTLY TO OUTLET BOX.


- 1.) Secure mounting bar (D) to outlet box with outlet box screws (E). Thread nipple (C) into mounting bar (D) and secure with lock washer (B) and lock nut (A). Do not thread nipple less than three turns. Attach screw collar (G) to nipple (C).
- 2.) Using two pair of pliers, open one link of chain and connect it to the fixture loop (J) at the top of the fixture.
- 3.) Slide the screw collar ring (I) and canopy (H), in that order, over chain. Open the other end of the chain link and attach it to the screw collar (G), which has been mounted to the ceiling nipple. Be sure to close all chain links completely.
- 4.) Lace fixture wires up through the chain and pass wires through the hole in screw collar (G).
- 5.) Take note of the color of the wire(s) on your fixture. Identify which group your fixture wire(s) fall into and connect the wires according to the directions below:

Group A : Connect to Black House Wire	Group B : Connect to White House Wire
Black	White
* Parallel Wire (round & smooth)	* Parallel Wire (square & ridged)
White or Grey with tracer	White or Grey without tracer
Brown, Gold or Black without tracer	Brown, Gold or Black with tracer

*NOTE: When parallel wire is used (clear gold wire), the tracer wire is square shaped or ridged and the less tracer wire is round in shape or smooth. (Seen best when viewed from wire end.) To separate wires, grasp the ends of each wire and pull apart.

- 6.) Take your fixture wire(s) from **Group A** and place evenly against the black wire from the outlet box and twist together the bare parts of the metal.
- 7.) Fit a wire connector (not supplied) over the twisted wires and screw the connector clockwise until you feel a firmness.
- 8.) Try gently to pull the connector off the wires. If you can pull the connector off, carefully re-do steps 6 and 7, as above, and check again for a firm connection.
- 9.) Connect the fixture wire from **Group B** to the white wire from the outlet box in the same manner.
- 10.) **GROUNDING INSTRUCTIONS:** The green grounding screw (F) is to be inserted into the hole with two raised dimples provided on the mounting bar (D). Wrap the ground wire from the fixture and the ground wire from the outlet box (bare metal or green insulated wire) around the green grounding screw on the mounting bar. If an uninsulated wire is supplied on the mounting bar instead of the green grounding screw, connect the ground wire from the fixture and the outlet box to it using a small wire connector (not supplied). **NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.**
- 11.) After wires are connected, tuck them carefully inside the outlet box and raise the canopy (H) against ceiling and screw collar ring (I) to the screw collar (G).
- 12.) Install candle covers.
- 13.) Install lamps. **DO NOT EXCEED THE MAXIMUM WATTAGE SPECIFIED.**

**INSTALLATION:
FIGURE 1**

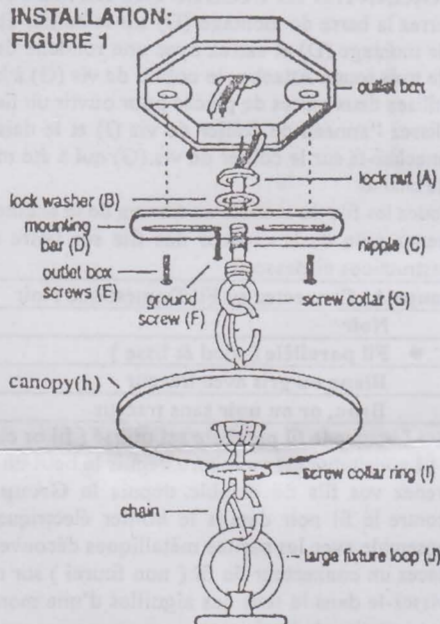

INSTRUCTIONS DE SECURITE ET D'INSTALLATION POUR LA MEUBLE D'ACCROCHAGE

AVERTISSEMENT: ASSUREZ-VOUS DE COUPER TOUT D'ABORD L'ELECTRICITE DES FILS SUR LESQUELS VOUS TRAVAILLEZ; POUR CE FAIRE, ENLEVEZ LE FUSIBLE OU METTEZ L'INTERRUPTEUR DE CIRCUIT SUR "ARRET".

EN GENERAL: Vous n'avez pas besoin d'outil spécial pour installer ce meuble. Assurez-vous de bien suivre toutes les étapes indiquées dans l'ordre donné. N'accrochez en aucun cas un meuble aux fils électriques domestiques, ni de meuble d'ornementation à un plafond ayant un système de chauffage irradiant.

LISEZ TOUTES LES INSTRUCTIONS: Tout le circuit électrique doit être conforme aux codes électriques locaux et nationaux. Si vous n'êtes pas certain de ces codes ou ne comprenez pas toutes les instructions, veuillez demander à un technicien qualifié d'installer le meuble.

INSTALLATION: SCHEMA 1

IMPORTANT: N'ATTACHEZ PAS LE MEUBLE DIRECTEMENT SUR UN BOITIER ELECTRIQUE.

- 1) Serrez la barre de montage (D) sur le boîtier électrique avec les vis de boîtier électrique (E). Placez la têtine (C) dans la barre de montage (D) et serrez avec une rondelle de verrouillage (B) et l'écrou de verrouillage (A). N'étendez pas la têtine sur plus de trois tours. Attachez le collier de vis (G) à la têtine (C).
- 2) Utilisez deux paires de pinces pour ouvrir un lien de chaîne et le connecter sur la boucle de meuble (J) au sommet de celui-ci.
- 3) Glissez l'anneau de collier de vis (I) et le dais (H) dans cet ordre sur la chaîne. Ouvrez l'autre extrémité du lien de chaîne et attachez-la sur le collier de vis (G) qui a été monté sur la têtine de plafond. Assurez-vous de refermer entièrement tous les liens de chaîne.
- 4) Nouez les fils du meuble au travers de la chaîne et passez-les au travers du trou dans le collier de vis (G).
- 5) Prenez note de la couleur des fils sur votre meuble. Identifier à quels groupes ils appartiennent et connectez-les selon les instructions ci-dessous:

Groupe A: Connectez au Fil Domestique Noir	Groupe B: Connectez au Fil Domestique Blanc
Noir	Blanc
● Fil parallèle (rond & lisse)	● Fil parallèle (carré & rugueux)
Blanc ou gris avec traceur	Blanc ou gris sans traceur
Brun, or ou noir sans traceur	Brun, or ou noir avec traceur

*Note: Lorsque le fil parallèle est utilisé (fil or clair), le fil avec traceur est carré ou courbé alors que celui sans traceur est rond et lisse (La visibilité est meilleure depuis le bout du fil). Pour séparer les fils, tenez leurs extrémités et tirez.

- 6) Prenez vos fils de meuble depuis le Groupe A et placez-les contre le fil noir depuis le boîtier électrique, puis tournez-les ensemble avec les parites métalliques découvertes.
- 7) Placez un connecteur de fil (non fourni) sur ces fils enroulés et vissez-le dans le sens des aiguilles d'une montre jusqu'à ce que vous sentiez de la résistance.
- 8) Essayez de tirer doucement le connecteur hors des fils. Si vous arrivez à le sortir, répétez les Etapes 6 et 7 ci-dessus, puis vérifiez de nouveau jusqu'à ce que la connexion soit ferme.
- 9) Connectez les fils de meuble depuis le Groupe B sur le fil blanc depuis le boîtier électrique de la même manière.
- 10) **INSTRUCTIONS DE MISE A TERRE:** La vis de terre verte (F) doit être insérée dans le trou avec les deux fossettes surélevées fournies sur la barre de montage (D). Enroulez le fil de terre depuis le meuble et celui depuis le boîtier électrique (métal découvert ou fil d'isolation vert) autour la vis de terre verte sur la barre de montage. Si un fil d'isolation est fourni sur la barre de montage au lieu de la vis de terre verte, connectez-y le fil de terre depuis le meuble et le boîtier électrique en utilisant un petit connecteur de fil (non fourni).

NE CONNECTEZ JAMAIS LE FIL DE TERRE AUX FILS ELECTRIQUES NOIRS OU BLANCS.

- 11) Après avoir connecté tous les fils, mettez-les avec précaution dans le boîtier électrique et surélevez le dais (H) contre le mur, puis vissez l'anneau de collier (I) sur le collier de vis (G).
- 12) Installez les couvercles de chandelle.
- 13) Installez les ampoules. **NE DEPASSEZ PAS LE WATTAGE MAXIMAL DEFINI.**

INSTALLATION:
SCHEMA 1

