




ASSEMBLY AND INSTALLATION INSTRUCTIONS for the 259411 LED Fixture

Important Safety information (Please read before proceeding)

1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.
2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.
3. Never use light bulbs with wattage ratings that exceed the fixtures maximum rating. Always make sure the electric current is turned off before changing the bulbs.
4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

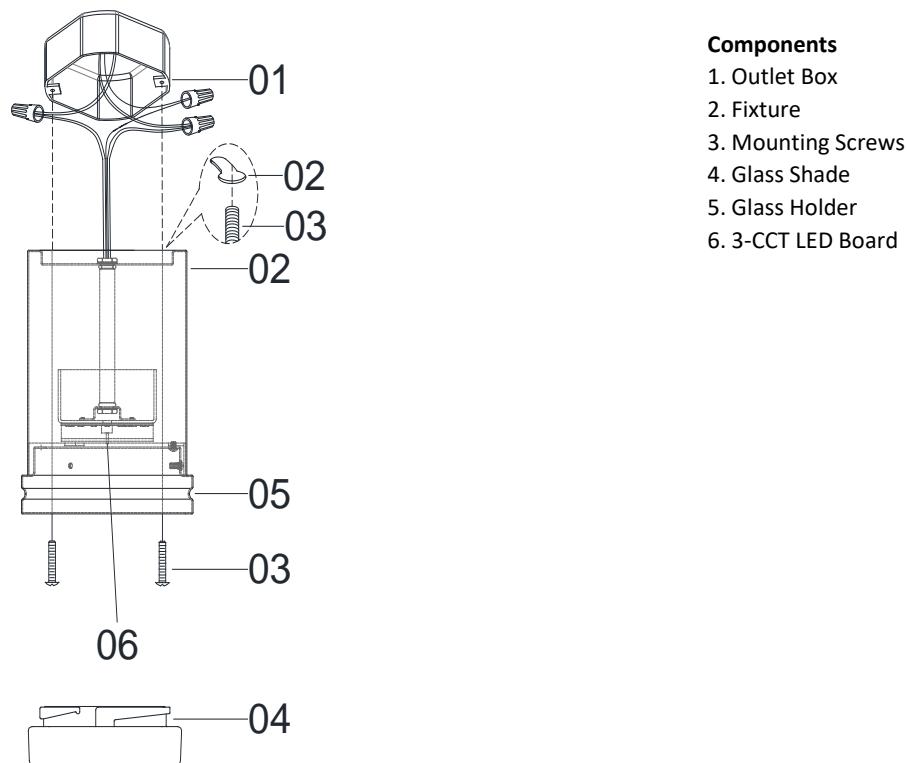

Assembly Instructions for the 259411 LED fixture

1. Assemble Mounting Screws (3) into threaded holes of Outlet Box (1) per illustration shown.
2. Raise Fixture (2) toward outlet box, wrap fixture grounding wire around Green Screw on Mounting Bracket (1), then connect it to outlet box grounding wire with wire connector supplied; connect white fixture wire to the white power supply wire with wire connector supplied; connect black fixture wire to the black power supply wire with wire connector supplied.
3. Push Fixture (2) to ceiling, carefully passing Mounting Screws (3) through slot holes, hold and secure fixture to ceiling by tightening Mounting Screws (3).
4. Raise Acrylic Shade (4) up to Fixture (2), then twist Acrylic Shade (4) per illustration shown, make sure Protruding Stoppers (5) of acrylic shade edge setting into Slot Holes (6) of fixture pan securely per illustration shown (DO NOT over tighten.)
5. 3-CCT LED Board (6) is set at 3000K, toggle switch to achieve the desired Color Temperature (3000K, 4000K, or 5000K).
6. Raise Glass Shade (4) up to Glass Holder (5), then twist Glass Shade (4) per illustration shown, make sure Slots of Glass Shade (4) are set onto Protruding Stoppers inside Glass Holder (5) securely (DO NOT over tighten).