


## ASSEMBLY AND INSTALLATION INSTRUCTIONS for the 825751 Fixture

## Important Safety information (Please read before proceeding)

- 1. Remove the fixture, parts and all mounting hardware bags (orange) from the carton and verify that all parts are present according to the illustration sheet. All parts must be used as indicated. Do not replace any parts, leave any parts out, or use any parts which are worn out or broken. Failure to follow the instructions could cause a hazardous situation, voids the warranty and violates the U.L. listing of the fixture.
- 2. To prevent the electric shock, turn off the main power at the circuit breaker before installing the fixture. **NEVER attempt to install, clean or replace bulbs without shutting off the electricity to the fixture.**
- 3. Never use light bulbs with wattage ratings that exceed the fixtures maximum rating. Always make sure the electric current is turned off before changing the bulbs.
- 4. If you experience difficulties installing the lighting fixture or it fails to work as expected, please contact a local qualified licensed electrical contractor.
- 5. Please contact your local Capital Lighting Fixture reseller with any assembly or installation questions. Your local reseller can also provide you with replacement parts for your new fixture.

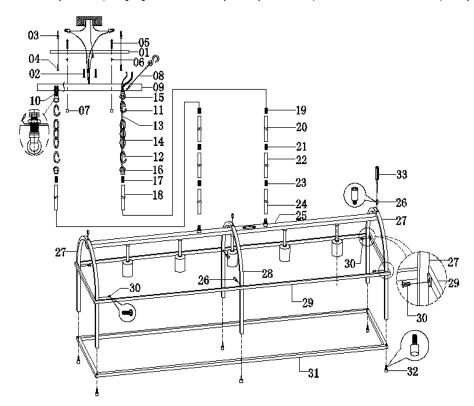

## Components

- 01. Mounting Bracket w/Green Screw
- 02. Outlet Box Mounting Screws
- 03. Plastic Anchors
- 04. Wood Screws
- 05. Mounting Screws
- 06. Hex Nuts (8/32)
- 07. Cylinder Nuts
- 08. Safety Cable w/Hook
- 09. Canopy 10. Turn Buckle
- 11. Chain End Link
- 12. Chain End Link
- 13. Lead Wire 14. Chains
- 15. Loops (1/8IP)
- 16. Loops (1/8IP)
- 17. Nipple 18. Rod 19. Nipple
- 20. Rod 21. Nipple 22. Rod
- 23. Nipple 24. Rod 25. Fixture
- 26. Philips-head Cylinder Nut
- w/Threaded Bolt
- 27. Side 'n' Arc Section
- 28. Middle 'n' Arc Section
- 29. Top Rectangle Frame
- 30. Flat Head Philips Screw
- 31. Bottom Rectangle Frame
  32. Cylinder Nut w/Threaded Bolt
- 33. Philips Screw Driver (not provided)

## Assembly Instructions for the 825751 Fixture

- 1. Lower Side 'n' Arc Sections (27) onto bar of Fixture (25), make sure assembling holes between Side 'n' Arc Sections (27) and bar of Fixture (25) are in line by starting Philips-head Cylinder Nut w/Threaded Bolts (26) before securing them completely with Philips Screw Driver (not provided) (33) together.
- 2. Lower Middle 'n' Arc Section (28) onto bar of Fixture (25), make sure assembling holes between Middle 'n' Arc Section (28) and bar of Fixture (25) are in line by starting Philips-head Cylinder Nut w/Threaded Bolt (26) before securing them completely with Philips Screw Driver (not provided) (33) together.
- 3. Raise Bottom Rectangle Frame (31) onto bottom ends of Side 'n' Arc Sections (27) and Middle 'n' Arc Section (28), make sure assembling holes among Side 'n' Arc Sections (27), Middle 'n' Arc Section (28) and Bottom Rectangle Frame (31) are in line by starting Cylinder Nut w/Threaded Bolts (32) before securing them completely together.
- 4. Lower Top Rectangle Frame (29) over top ends of Side 'n' Arc Sections (27) and Middle 'n' Arc Section (28), make sure assembling holes among Side 'n' Arc Sections (27), Middle 'n' Arc Section (28) and Top Rectangle Frame (29) are in line by starting all Flat Head Philips Screw (30) before securing them completely with Philips Screw Driver (not provided) (33) together.
- 5. Pass Lead Wire (13) from top of Fixture (25) through Rod (24), Nipple (23), Rod (22), Nipple (21), Rod (20), Nipple (19), Rod (18), Nipple (17) and Loop (16), then screw all together. After that, repeat the same assembling steps for another side. Note: The Fixture Height can be adjusted by varying the number of rods or chain used in the assembly.
- 6. Pass Lead Wire (13) thru one Chain End Link (12), Chain (14), another Chain End Link (11), Loop (15) from Canopy (09). Finally, connect all of them together. After that, repeat the same assembling steps for another side without wiring. Note: Spread Chain End Link of chain, use a pair of PLIERS and a SCREW-DRIVER shown above as well as wrap a soft cloth around pliers to protect the finish, also adjust Chain to desired length.
- 7. Find appropriate threaded holes on Mounting Bracket (01), then assemble Mounting Bracket (01) to mounting surface using hardware suitable for material of mounting surface. Mark position of holes on mounting surface before using provided Plastic Anchors (03), drill appropriate holes and assemble as illustrated.
- 8. Find appropriate threaded holes on Mounting Bracket (01), and assemble Mounting Screws (05) into threaded holes with Hex Nuts (06).
- 9. Attach Mounting Bracket (01) to Outlet Box with Outlet Box Mounting Screws (02), and to mounting surface with Wood Screws (04) tightly.
- 10. Raise whole Fixture (25) toward outlet box, then hang it onto Mounting Bracket (01) with Safety Cable w/Hook (08) as the illustration shown. *Note: This will allow for fixture to be supported while wire connections are made.*
- 11. Connect fixture ground wire to the outlet box ground wire with wire connector supplied; connect the common wire of the lamp cord to the power supply white wire with wire connector supplied; connect supplied; connect supplied wire of the lamp cord to the power supply black wire with wire connector supplied. Note: This fixture is wired using 2 conductor Lamp cord. The insulation between the two conductors on the lamp cord can be split down the center for better access to the two conductors. The common wire on the lamp cord is identified as the conductor with ribs embossed in the rubber wire insulation.
- 12. Push Canopy (09) to ceiling, carefully passing Mounting Screws (05) through holes in Canopy (09), then verify all wires are securely inside Canopy (09). Finally, secure fixture to ceiling with Cylinder Nuts (07). Note: If the fixture is not leveled after hung, please adjust (screw) the Turn Buckle (10) up or down to help it.

Approved by: Brasselle, Glenn Last Updated: 12/18/2018